


**Step 1:** Ensure that the surface to which the antenna is to be installed is clean, dry and free of dust or debris.



**Step 3:** Starting at the edge of the antenna press firmly; sliding pressure down toward the cable of the antenna to keep the surface smooth until the antenna is completely adhered to the surface.



**Step 2:** Peel back the protective paper liner from the antenna.

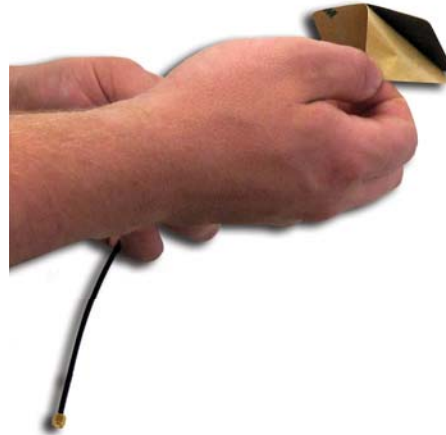

**Step 4:** Connect the antenna to the equipment via the RF connector.



### Important Installation Notes:

- Install on only non-metallic, surfaces, such as fiberglass, Kevlar, polycarbonate, polyethylene, or other plastic.
- Adhesive is a permanent one-time-use adhesive.
- If evaluating different antenna locations, use removable masking tape to position the antenna prior to peeling back the paper liner.